 


Fahrenheit

☐ **H-88BK** ☐ **H-88BG** ☐ **H-88GR** ☐ **H-88GRDK**

**Two Preloaded 8.8" Wide Universal
Replacement Headrest Monitors Package**

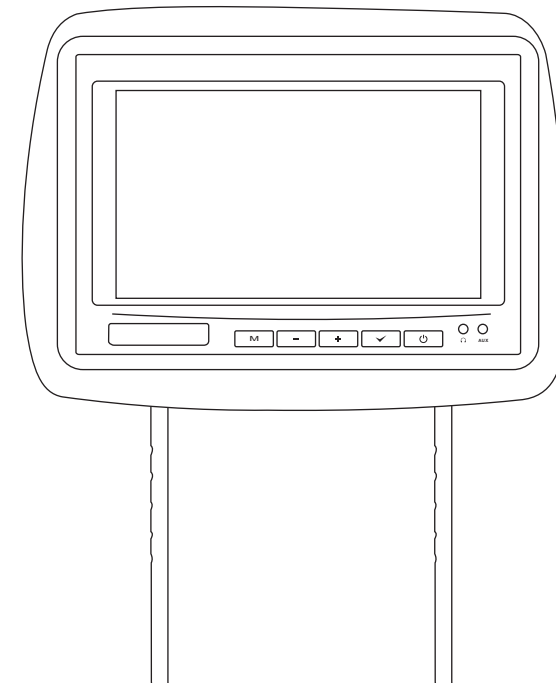

OWNER'S MANUAL

Please read this User's Manual in detail and use the set properly.

CAUTION	3
INSTALLATION	5
NAME AND FUNCTION OF EACH PARTS	6
Unit	6
Remote Control	7
PICTURE CONTROL	8
CONNECTIONS	9
HOW TO OPERATION THE MONITOR	10
How To Swivel The Monitor	10
How To Watch The Monitor	10
SPECIFICATIONS	11


Power Requirements	DC 12V
Power Consumption	9W
Screen Size	8.8" TFT-LCD
Screen Format	16:9 Wide
Resolution Pixel	1440x234
A/V Inputs	3 AV Inputs(1 AV Input from front face)
Dimensions	11.6(L)X8.7(W)X4.7(H)inches
Carrier frequency:	A CH:914MHz B CH:915MHz
LCD Panel Type	Active Matrix TFT
Compatible video standard	NTSC/PAL Auto Select

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

How to Swivel The Monitor

 
You can adjust the swivel angle as shown below.

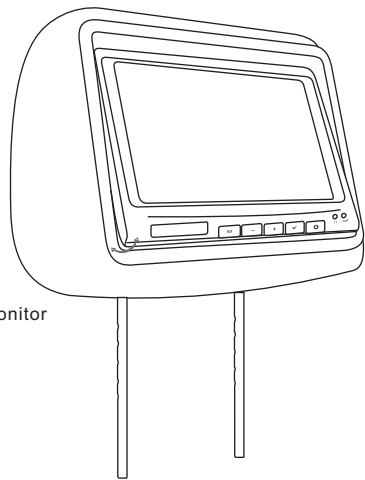

Make this arrow to swivel the monitor

How to watch the monitor

 1. Connect the monitor to the external devices.
2. Press the POWER button on either the remote control or the unit once to turn the power on.
Press the same POWER button to turn the power off.

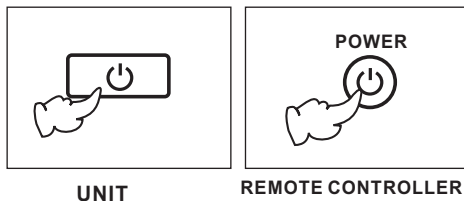

UNIT

REMOTE CONTROLLER

3. Turn on the external devices and view.

Please read and observe all warnings and instructions in this owner's manual and those marked on the unit. Retain this booklet for future reference.

There are two kinds of alarm symbols as follows:



WARNING

The lightening flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of " dangerous voltage " within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to people.



CAUTION

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



WARNING



Installation of all TV monitors must be out of the driver's field of sight.



Do not mount the product where it will obstruct the deployment of the airbag or in an area where it would affect the vehicular control. Also be careful to avoid mounting the product where it can become hazardous during sudden stops or in the event of an accident.



Do not try and service these products yourself. Seek only a qualified service center or factory service center.



Be careful not to drop or apply under pressure to the front panel of your video monitor. If the screen cracks due to misuse, your warranty will be void!



Use extra caution with any liquids in your car. If you or your child Spills any liquid on these products, pull your vehicle to the roadside and turn the key off to disconnect or wipe the products with a towel. Do not operate the equipment until all liquids have either evaporated or you have had the monitor inspected at a service center by a qualified technician. Severe harm or danger can Occur.



Use only a damp cloth to clean the screen and use only purified water on the cloth. Wring out all excess water prior to wiping the screen. Do not use any cleaners or chemicals to clean the screen. In most cases a dry cloth will do!

CAUTION

CAUTION



Quality installations are best performed by qualified and certified installers.



Watching the monitor for an extended period of time with the engine turned off may deplete the vehicle's battery.



Don't touch the unit if there is a flash of lightning. It may receive an electric shock.



This product is designed for operation with a 12 Volt DC, negative ground vehicle. It is not suitable for operation under other conditions or voltages.

 


Do not cover heater ducts or vents. This may cause a fire or an electric shock.

Check Point

1. The operating temperature of this product is limited to 14°F~140°F (-10°C~60°C).
Your vehicle can reach temperatures up to 100 C in the summertime.
2. When your vehicle is extremely hot or cold you must allow time for your air conditioner or heater to cool or heat the vehicle and for operating temperatures to return to normal operating ranges. Your monitor will return to its normal functions when these operating ranges are achieved.
3. Optimum picture quality is achieved when you are directly in front of the monitor (+/-45 degrees).
4. If the buttons get stuck, please try to press the up of buttons, it will get back. It won't impact using normal.
5. If you can't find the files name in list when playing, please reset units or turn off/on over again.
6. If the unit can't be change mode when playing some special files which the unit didn't support, please reset units or turn off/on over again.

CONNECTIONS

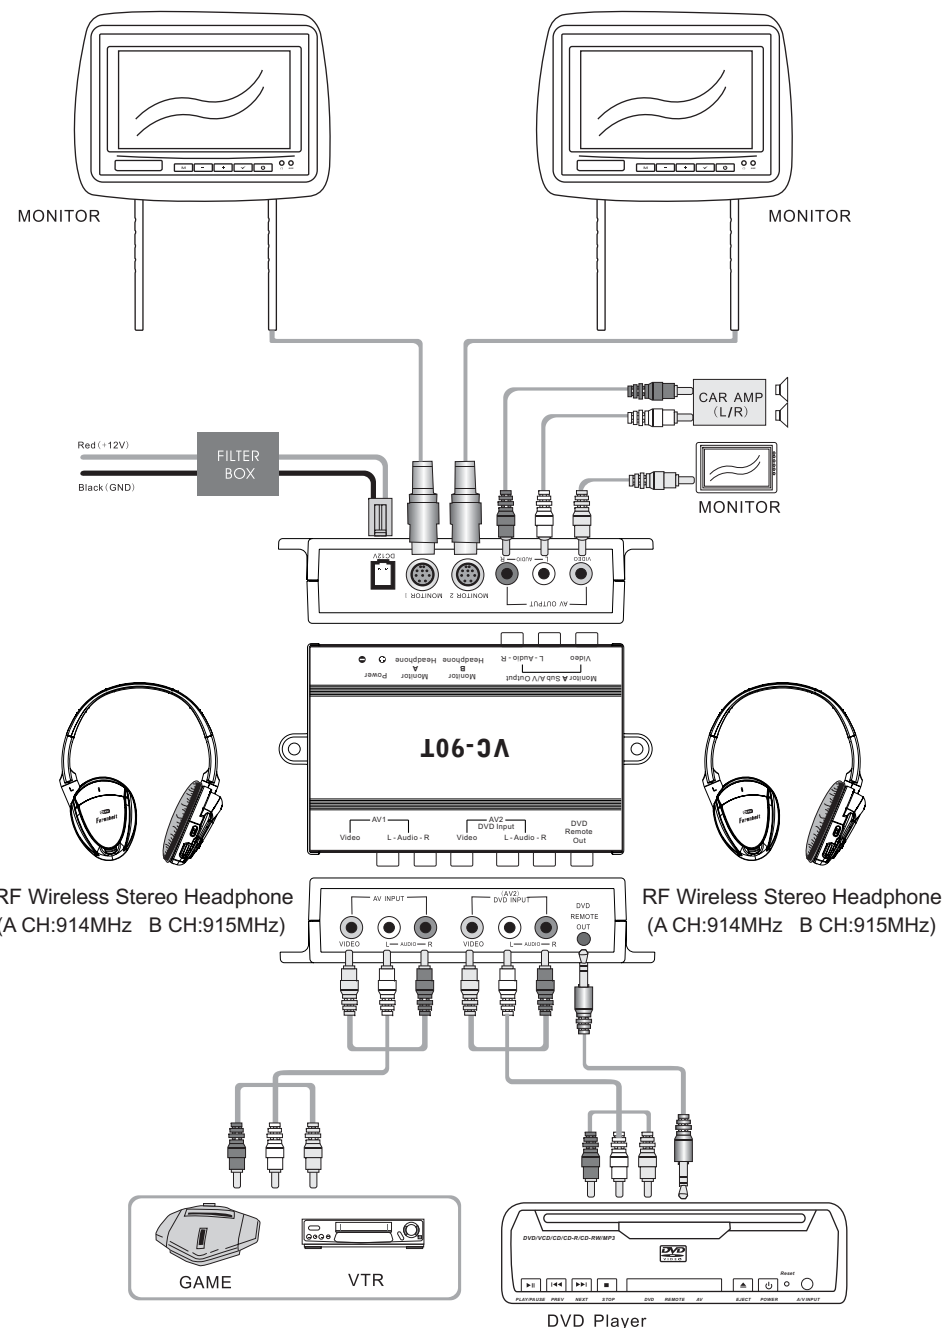

Contrast/Brightness/Color

To adjust CONTRAST, BRIGHTNESS, COLOR press the MENU button until you arrive at the screen for that item. Use the arrow buttons to adjust the value. Press the MENU button to make another adjustment or leave the MENU system.

1. Bring up the on-screen function menu by pressing the MENU button on the unit or the remote control.
2. Press the MENU button on the unit or the remote control of monitor until you see the item you wish to adjust.
3. Use the arrow buttons to adjust the value.
4. Press the MENU button to make another adjustment or leave the MENU system.

 
CONTRAST



BRIGHTNESS




COLOR

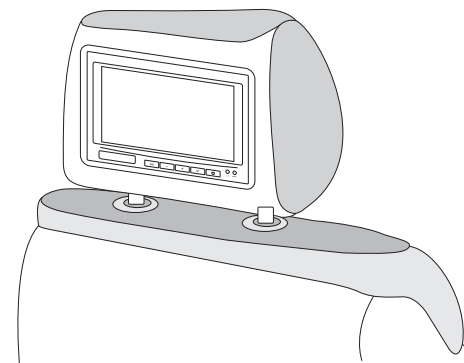



Product installed

1. Remove the existing headrest from the seat.
2. Adjust the posts of the new headrest to fit the holes in the seat where the headrest will be installed. The post can be moved together or apart grasp one post in each hand, move the posts in opposing directions (like they were walking) while pushing them toward each other or away from each other.
3. Insert the cable in the proper hole. Insert the posts into the holes in the seat and carefully work the headrest into position. Make sure the cable is not pinched.
4. Run the cable down the seat and out to the location of the video source unit (such as a DVD player).
5. See the picture on the right and you can adjust the distance between the tubes to required space (pole width adjustments 4" ~ 8.2").

 How to use the Adapter tubes

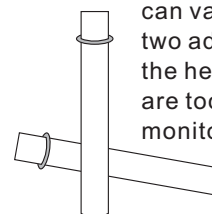


  Since the spacing of the mounting holes can vary on different vehicles we supply two adapter tubes. Use these tubes when the headrest mounting holes in your seat are too large for the posts of the headrest monitor.

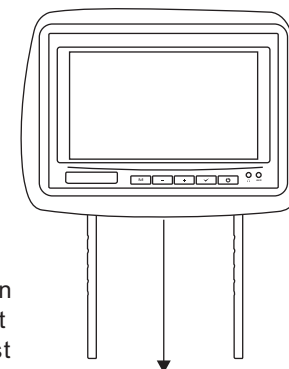

NAME AND FUNCTION OF EACH PART

 ● Unit

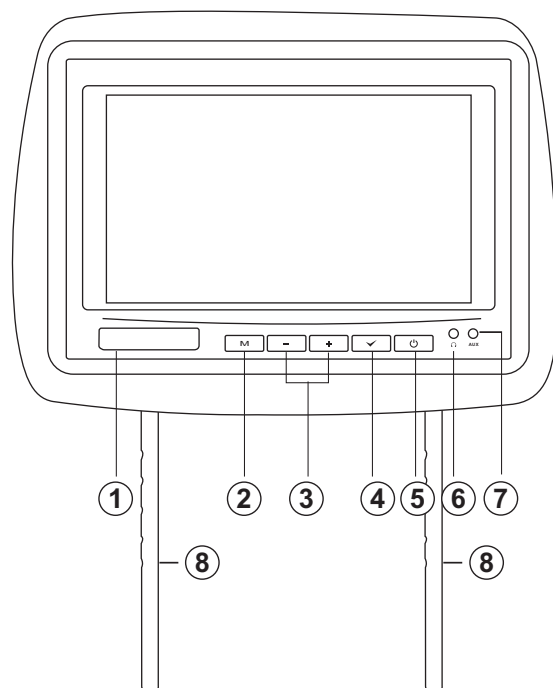

① REMOTE IR SENSOR

② MENU

This button enables the on-screen display menu system. Once enabled, this button is used as an ENTER button.

③ UP/DOWN BUTTONS

These buttons are used to increase or decrease parameters in the on-screen display menu system.

④ AV SOURCE SELECTOR

Use this button to switch among A/V Source 1 and A/V Source 2 and A/V Source Aux.

⑤ POWER ON/OFF

This button turns the monitor system on and off.

⑥ HEADPHONE JACK

Headphone output

 
⑦ AUX Inputs

⑧ PIPE

Adjustable steel Pipe

NAME AND FUNCTION OF EACH PART

● Remote Control

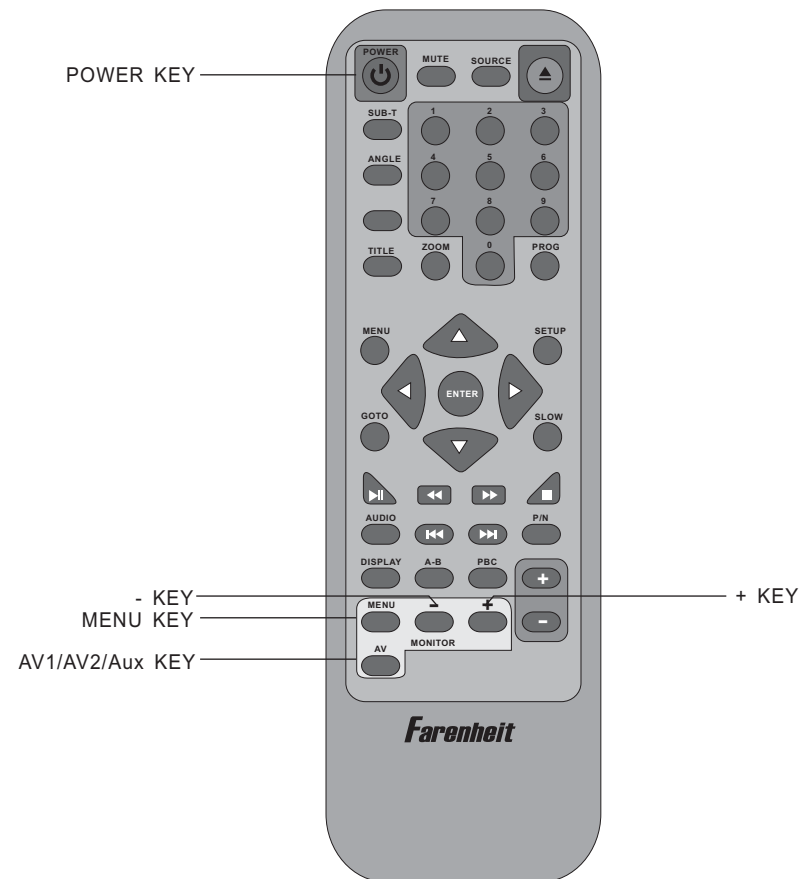

Interface Switch Function

Power: Power ON/OFF

AV Signal Select

Menu: Press this button for OSD menu.
: And select menu option.

+: Increase current option value.

-: Decrease current option value.